



- 1 Press and hold the programming button.  
With your finger still holding it down,  
connect the black connector.  
*The blue, red, yellow, and blue & red LEDs will alternate.*




- 2 When only the blue LED is momentarily lit, release  
the programming button.  
*The blue LED should stay lit. If it doesn't unplug the black  
connector and restart Step 1.*



- 3 Insert the required remaining connectors.




- 4 Press and release the vehicles START/STOP button  
twice to turn on the ignition.  
*Do not press the brake pedal.*

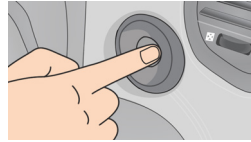

- 5 Press and release the programming button on  
the remote start module.  
*The blue LED should turn off, followed by the blue LED flash-  
ing.*




- 6 Press and release the vehicles START/STOP button  
once to turn off the ignition.

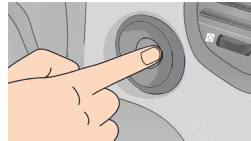

- 7 Press the UNLOCK button on the OEM remote.  
*The blue LED should turn off.*  
**Wait for the yellow LED to turn on solid.**



8 Remove the battery from the OEM Remote.  
*Place any additional remotes at least 20 feet away.*

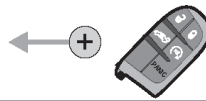

9 Put the nose side of (side opposite of the emergency key) the OEM remote next to the vehicles START/STOP button as shown.



**Do not move the remote until the RED LED turns on in the next step.**

10 Press and release the vehicles START/STOP button twice to turn on the ignition.  
*The YELLOW LED should turn off, RED LED should turn on.*




YELLOW  
turns  
off



RED  
turns  
on

11 Press and release the vehicles START/STOP button once to turn off the ignition.

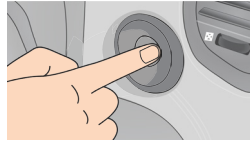

12 Put the nose side of (side opposite of the emergency key) the OEM remote next to the START/STOP button as shown.



**Do not move the remote until the RED and YELLOW LED's alternate in the next step.**

13 Press the vehicles push to start button twice to turn on the ignition.  
*The BLUE LED should turn on, the BLUE LED should turn off, the RED and YELLOW LED's should alternate.*




BLUE  
TURNS  
ON



BLUE  
TURNS OFF  
RED AND  
YELLOW  
ALTERNATE

14 Press and release the vehicles START/STOP button once to turn off the ignition.

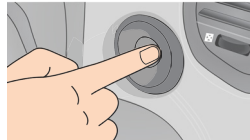

**PROGRAMMING IS NOW  
COMPLETE**

- Reinsert the battery into the OEM Remote.
- Disconnect all the connectors from the Remote Start module. Disconnect the black one last.
- Complete the dcryptor process. See page 10.
- Connect the module back to the T-Harness connecting the black one first.