


**Remote Start Module must be programmed before programming the RF kit.  
Engine must be off for at least 5 seconds before programming the RF kit.**

**1** Press and hold the programming button.  
With your finger still holding it down,  
connect the black connector.  
*The blue, red, yellow, and blue & red LEDs will alternate.*



**2** When the blue and red LEDs are momentarily lit, release the programming button.  
*The blue and red LEDs should stay lit. If they don't, then unplug the black connector and restart Step 1.*

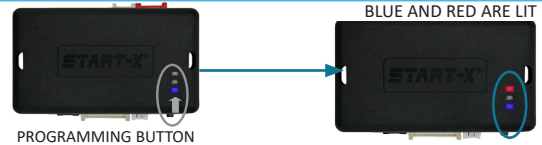


**3** Press and hold the programming button until the Blue and RED LEDs turn back ON.  
*The Blue and Red LED will go Off and back On.*



**4** Turn the key to the ON/RUN position.  
*All three LEDs should turn on. The antennas LED should flash.*



**5** Press and hold the button on the remote.  
Release when the LED on the remote turns on solid after about 12 seconds. Repeat with the 2nd remote.  
*The LED on the remote should turn on, flash, turn off and turn back on solid.*

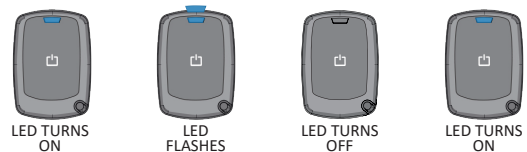

*The 3 LEDs on the module will blink briefly confirming that the remote was programmed.*



**6** Turn the key to OFF and remove.  
*All three LEDs should turn off.*

